



**1A** Kleben ◦ ⇨ **BA21XX821**


oder

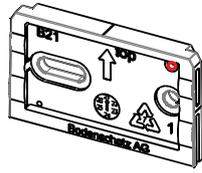

**1B** ⇨ **BA21XX821**

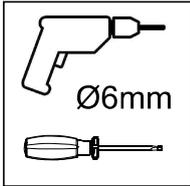

**1A**  
Kleben ⇨ siehe Anleitung!

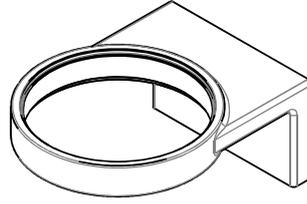

2


**1B**

1  
Ø6 (2x)




**1A** Kleben ◦ ⇨ **BA21XX821**


oder

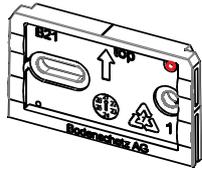

**1B** ⇨ **BA21XX821**

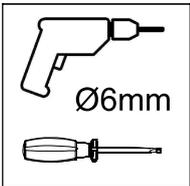

**1A**

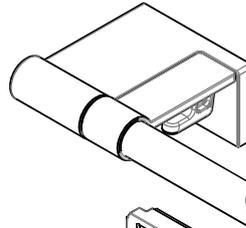

2


**1B**

1  
Ø6 (2x) / pro Seite




**1A** Kleben ◦ ⇨ **BA21XX822**


oder

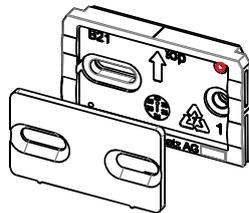

**1B** ⇨ **BA21XX822**

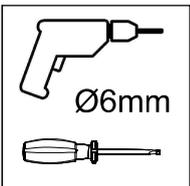

**1A**

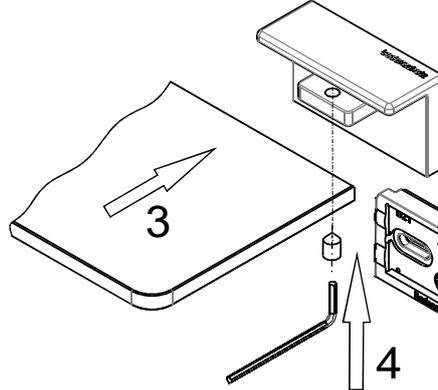


2

**1B**

1  
Ø6 (2x)




**1A**

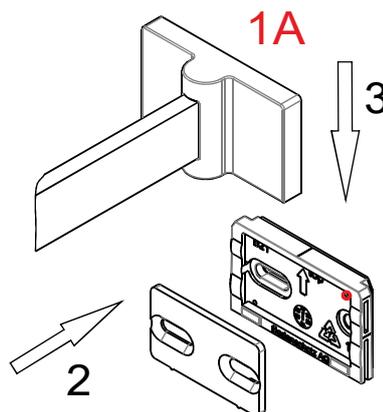

3

**1B**

1  
Ø6 (2x)

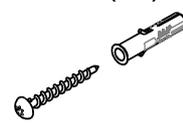


- BA21VC204
- BA21VC205
- BA21VC238
- BA21VC239
- BA21VC240
- BA21VC241

1A Kleben ◦

oder


1B

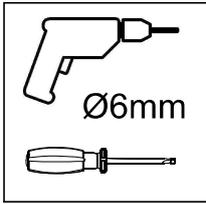

BA40VC181

1A Kleben → siehe Anleitung!


1B

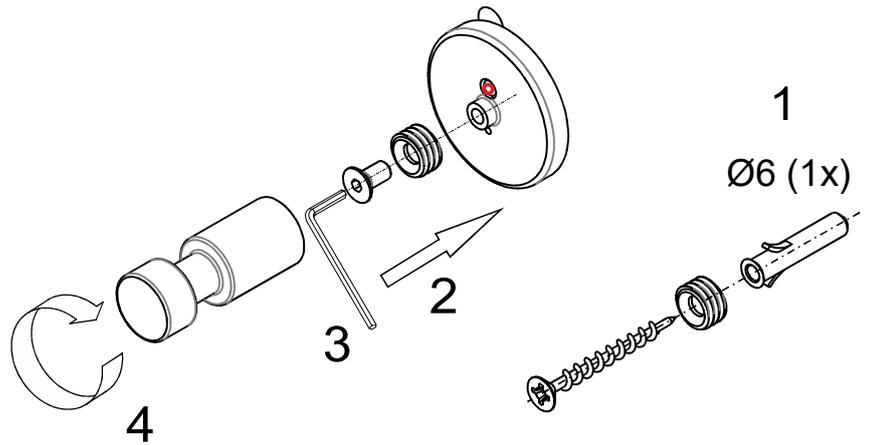

1A Kleben ◦

BA40VC243


1A Kleben → siehe Anleitung!

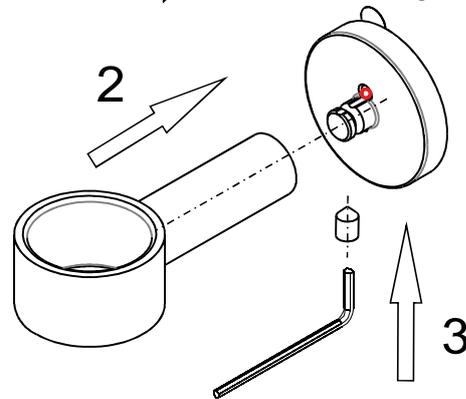

1A Kleben ◦

oder

1B

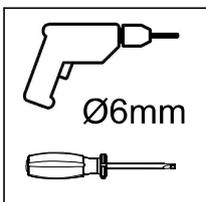


BA40VC282

Kleben → siehe Anleitung!


1A

1B

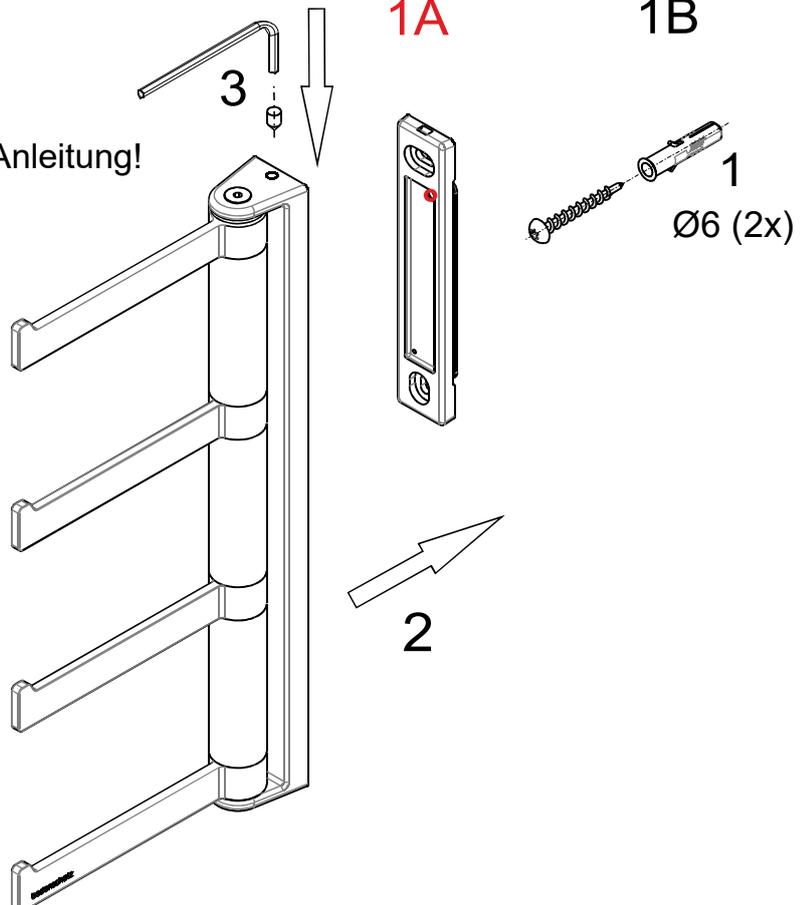

**1A** Kleben   **BA40XX347**


oder

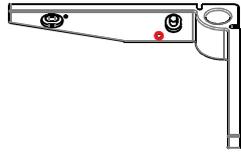

**1B**   $\varnothing 6\text{mm}$   **BA40XX347**




**1A**  
Kleben  siehe Anleitung!

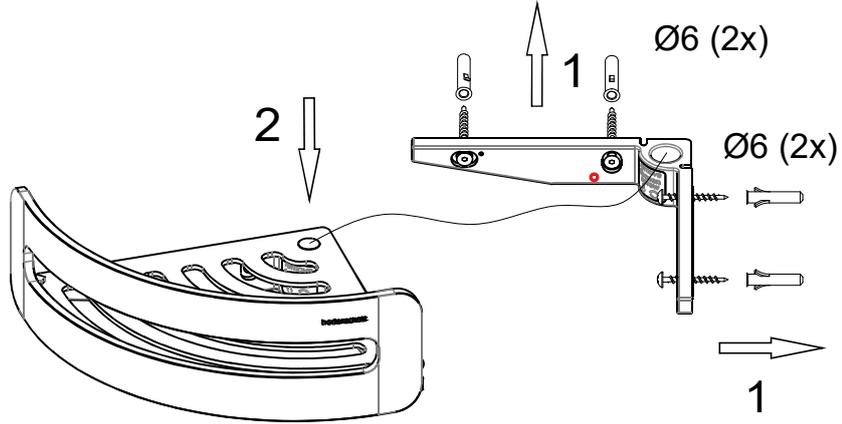

**1A** Kleben   **BA40XX348**


oder



**1B**   $\varnothing 6\text{mm}$   **BA40XX348**



**1A**  
Kleben  siehe Anleitung!

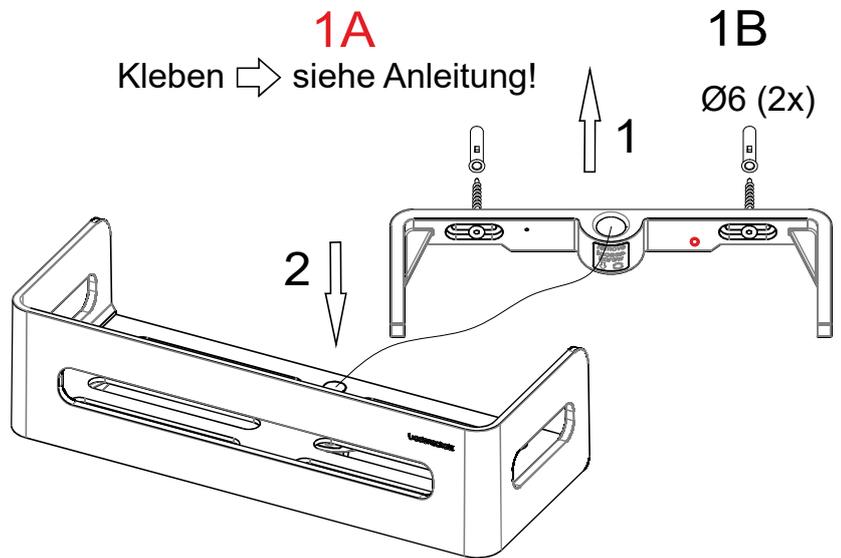

**1B**   $\varnothing 6\text{mm}$   **BA21VC171**  
bis  
**BA21VC177**

